


Thank you for purchasing mRAID16 Storage System. The Quickstart Guide is available from <http://active-storage.com/documents/mraid16-quickstart.pdf>.

For system configuration, please download the mRAID16 Quick Configuration Guide for SAN or NAS from the “Documents” section of our website <http://active-storage.com>.

To turn on/off the storage system, press the power button. Your mRAID16 will be turned on/off entirely, including all expansion(s), automatically.

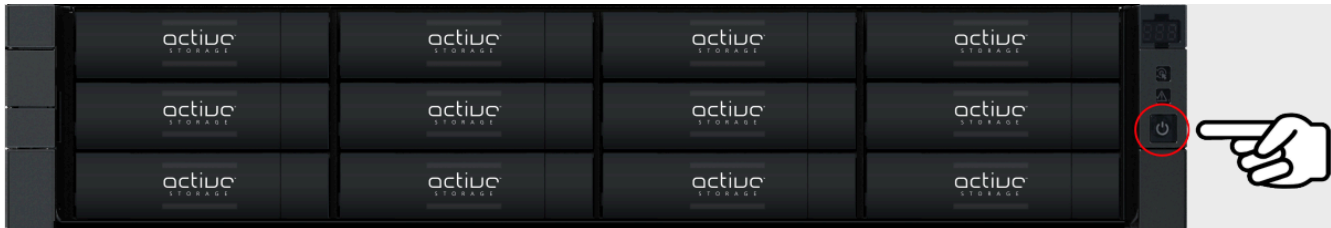

	System Name	Controller-A Setting	Controller-B Setting
IP Addresses:	mRAID16	192.168.128.101	192.168.128.102

The default password for mRAID16 is:

Active@active

If you have any questions about your mRAID16 Storage System, please contact us at: +1 (818)709-1166 or send an email to support@active-storage.com. Technical support is available 24 hours a day, 7 days a week.

mRAID16 Accessory Kit

mRAID16 Expansion Accessory Kit

